

PRODUCT NAME: SB-100-2/3/4- WEATHER-PROOF SOUNDER/HORN & BEACON

DOC NO.: EX TECH SAS-12-SB100-2-TM REV 04

WEATHERPROOF SOUNDER/HORN & BEACON

IP66

SB-100 SERIES

EX-TECH SAS

SB100-2/3/4 WEATHERPROOF SOUNDER/HORN & BEACON

TECHNICAL MANUAL



Please note that every care has been taken to ensure the accuracy of our technical manual. We do not, however, accept responsibility for damage, loss or expense resulting from any error or omission. We reserve the right to make alterations in line with technical advances and industry standards.

1.0 INTRODUCTION

SB-100 series Weatherproof Sounder/Horn & Beacon is designed according to EN 54 (BS 5879) standard. Enclosure material is composite material of PC (Polycarbonate) and Fiberglass. It applies to both indoor and outdoor industrial conditions. According to user's control system, 4 stages of alarm tones can be sent out, from less critical stage (stage 1) to the most critical stage (stage 4). 63 tones are selectable. Tone can be preset during installation. At the same time, four stages of alarm light can also be sent out.

2.0 LABELING

All products have a rating label, which carries the following important information:

Product order no.: e.g. **SB100BRL05RDCNNB**

(Refer to the datasheet for product order selection)

Input voltage: 12-30V DC or 30-60V DC or 100-250V AC

Finish product serial no. (Include date of construction): i.e. SB1000201080001

SB100- Sounder & Beacon **Day-02 Month-01 Year-08**
Product Serial Number-0001

3.0 TEMPERATURE CLASSIFICATION

The SB100 series products have been certified T4~T6. This means that the units can be installed in locations with the following conditions:

Temperature Range: $-40^{\circ}\text{C} < T_a < 70^{\circ}\text{C}$

4.0 INSTALLATION

General Requirement

The product must be installed in accordance with the latest issued relevant requirements in the EN 54(BS 5879) standard. Product installation must be carried out in accordance with any local codes that may apply and should only be carried out by a competent electrical engineer.

Location

The location of the unit should be made with due regard to the area over which both the sounder and beacon warning

signal must be audible and visible; and Junction Box/ Push Button can be easily operated (if any). The unit should only be fixed to services that can carry the weight of the unit.

Mounting

The unit coming with either one or two or three beacons and can be mounted on a vertical surface via a stainless steel mounting plate (see Fig 1). The fixing holes on the mounting plate are designed to fit M8 Allen Screw only. The diameter is 9mm. Use of stainless steel fastener is recommended by EX-TECH SAS

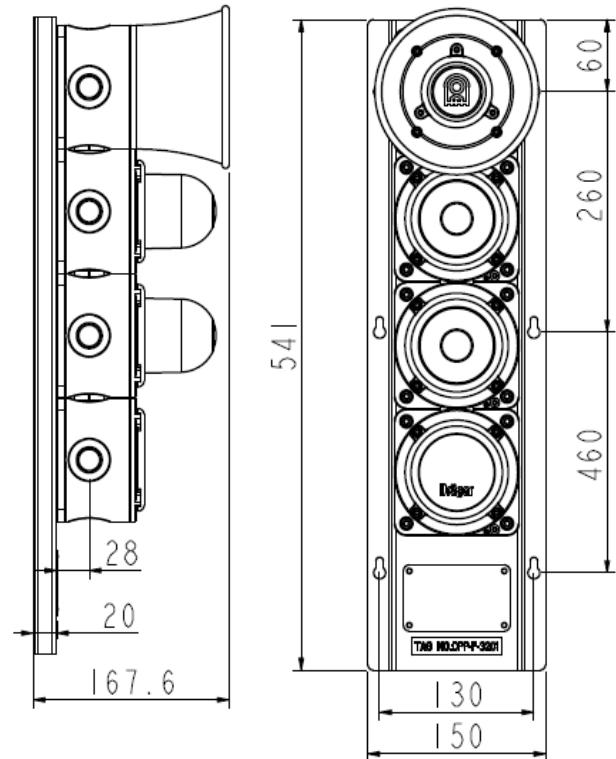


Fig 1

5.0 WIRING

General Requirement

EX-TECH SAS recommends that all cables and cores should be fully identified (suggest using cable from 2.0 to 2.5 mm²).

Ensure that all nuts, bolts and screws are secured. Ensure that only the right and certified cable glands are used and earthed correctly. Ensure that only the right and certified stopping plugs are used to blank off unused gland entry

points. In order to maintain the IP rating of the product, we recommend SS316L for this application.

Cable Connection

The cable connection is connected with the terminal blocks assembly located in the bottom unit which can be the **Beacon Component** or **Push Button/Junction Box**. Cable connection should be carried out in accordance with relevant technical requirement.

Remove End Cover

Unscrew the four (4) M5 retained hex socket head screws of the **Bottom Component** which can be Beacon or Push Button/Junction Box. This will release the cover from the base. Before replacing the cover, check that the flameproof joints are clean and not damaged, the gasket is still retained in its groove.

CAUTION: Before removing the cover, ensure the power to the product is isolated. Remove the four pieces of M5 socket screws to open the cover. Twist the cover gently clockwise and anti-clockwise, whilst pulling away from the base, until it comes off. Replace the cover in similar way, but operate in reverse manner as above.

Power Supply

12/24V DC or 30-60V DC or 100-240V AC

PCB Wiring Terminals (See Fig 3)

Apply power supply 12V/24V/36V/48V DC 100-250V AC to 'L' & 'N' (See Fig 3)

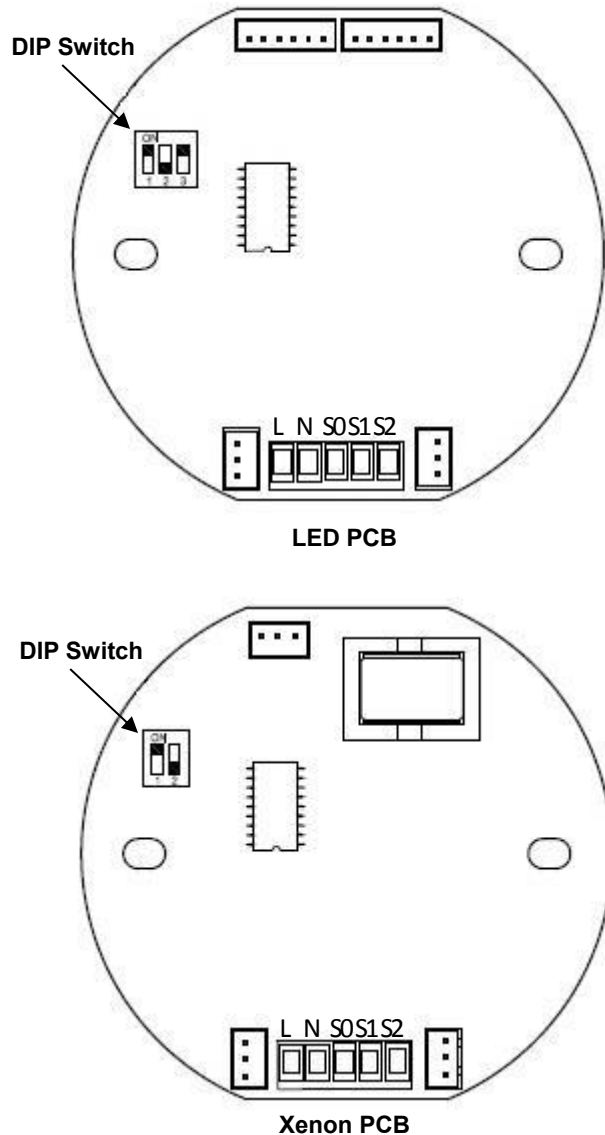


Fig 3

6.0 STATUS CHOSEN AND FLASHING FREQUENCY ADJUSTMENT

LED Beacon

The LED beacon provides flashing and rotary status to be selected

Use **DIP Switch** with 3 binary codes on the **LED Beacon PCB** to select flashing or rotary status (including steady status), the 3rd binary code is for high and low frequency chosen.

LED Status Selection Switch

1st & 2nd DIP Switch: ON=1, OFF=0;

3rd DIP Switch: HIGH= 1, LOW= 0

S1/S2: ON= Connect with 0/COM, OFF= Disconnect with 0/COM

DIP Switch			S1/S2			
			S1=OFF S2=OFF	S1=ON S2=OFF	S1=OFF S2=ON	S1=ON S2=ON
1 st DIP	2 nd DIP	3 rd DIP	Alarm Stage 1	Alarm Stage 2	Alarm Stage 3	Alarm Stage 4
0	0	0(1)	OFF	Flash 60 (75) times/min.	Flash 75 (90) times/min.	Steady
1	0	0(1)	OFF	Rotary 60 (75) times/min	Rotary 75 (90) times/min	Steady
0	1	0(1)	OFF	Triple Flash 60 (75) times/min.	Triple Flash 75 (90) times/min.	Triple Flash 100(120) times/min.
1	1	0(1)	OFF	&Rotary 60 (75) times/min	&Rotary 75 (90) times/min	&Rotary 100(120) times/min

Xenon Beacon

The Xenon Beacon provides flashing status

Use **DIP Switch** with 2 binary codes on the **Xenon Beacon PCB** (see Fig 3) for frequency adjustment.

Xenon Beacon Flashing Frequency Adjustment

DIP Switch: ON=1, OFF=0

S1/S2: ON= Connect to COM, OFF= Disconnect to COM

S1/S2 DIP Switch		S1 = OFF S2 = OFF	S1 = ON S2 = OFF	S1 = OFF S2 = ON	S1 = ON S2 = ON
1	2	Alarm Stage 1	Alarm Stage 2	Alarm Stage 3	Alarm Stage 4
1	1	OFF	60 times/min (1)	90 times/min (1)	120 times/min (1)
0	1	OFF	60 times/min (2)	60 times/min (3)	60 times/min (4)
1	0	OFF	60 times/min (3)	60 times/min (4)	60 times/min (5)
0	0	OFF	60 times/min (4)	60 times/min (5)	60 times/min (6)

All the value in () are the number of flash by time

7.0 TONE SELECTION

The sounder provides 63 tones to be selected for the alarm stage 2 to 4. Three stages of alarm tones can be preset via switch on the Sounder PCB.

Tone Selection Switch

Use the three (3) DIP switches with 6 binary codes on the **Sounder PCB** to select tones (See Fig 4).

Tone Selection Table (see attached table 1)

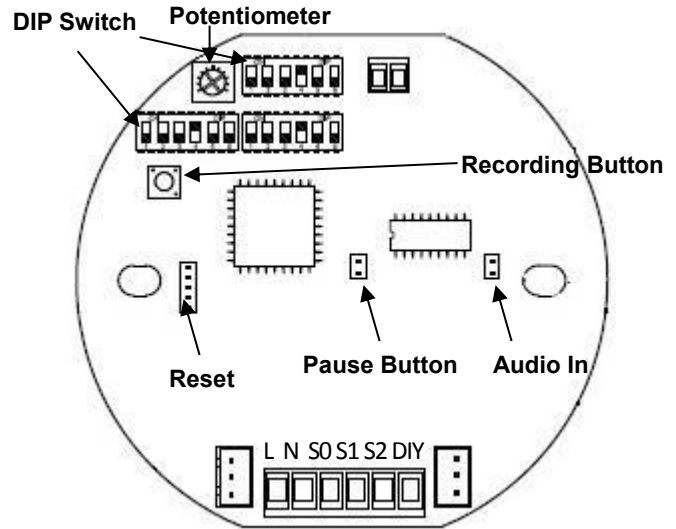


Fig 4

8.0 VOLUME CONTROL

The sounder has a volume control to adjust the output volume of the sounder component. To set the required output volume, adjust the potentiometer-VR1 on the PCB (See Fig 4). The potentiometer should be set to fully clockwise position if maximum output volume is needed.

9.0 SOUNDER RECORDING

The sounder can provide 4 tones can be recorded by the user. Use the Audio In and Recording Button (See Fig 4) to record.

Recording Procedure

1. Turn off S1 and S2;
2. Set up any DIP Switches as Tone 60-63 (refer to Attached Table 1- Tone Selection Table);
3. Insert the Audio IN plug;

4. Press the Recording Button and hold the button until the recording is finished.

CAUTION: The sounder will begin to record after 3 seconds from pressing the button. Don't release the button when the recording is in process. The maximum of recording time is 20 seconds.

10.0 SOUND PAUSE

The sound can pause by pressing the Recording Button. (See Fig 4)

As the pausing period, please refer to the below table:

Pressing Times	Default Setting	Option
1	1 minute	10 minute
2	5 minute	30 minute
3	10 minute	60 minute
4	Restore to the sound	Restore to the sound

In order to have the option function, please inform EX-TECH SAS in advance before EX-TECH SAS begin the production of the sounder.

10.0 CABLE GLAND

The SB100 series product has 1/2/3 cable gland entries.

SAFETY WARNING: If the SB100 is used at high ambient temperatures, i.e. over +40°C, then the cable entry temperature may exceed +70°C and therefore suitable heat resisting cable glands must be used, with a rated service temperature of at least 95°C.

If a high IP (Ingress Protection) rating is required, a suitable sealing washer must be fitted under the cable gland.

When only one cable entry is used, the other one must be closed with a blanking plug, which must be suitably approved for the installation requirements.

11.0 END OF LINE MONITORING

An end of line monitoring diode or an end of line monitoring resistor can be connected across the 24V+ and 0 terminals. If an end of line monitoring resistor is used, it must have a maximum resistance value of 3k ohms and a minimum wattage of 0.5 Watts; or a minimum resistance

value of 1.2k ohms and a maximum wattage of 2 Watts.

12.0 MAINTENANCE

During working life of the product, little or no maintenance is required due to the robust maintenance-free surface. Composite material of PC (Polycarbonate) is abrasion and corrosion resistant therefore the products are able to use in both indoor and outdoor industrial condition/ under harsh environment.

It can also be applied in areas with high impact loads without additional protective constructions due to very good mechanical properties.

If abnormal or unusual environmental conditions occur due to accident etc., visual inspection is recommended.

To avoid electrostatic charge build-up, only exterior of the product can be cleaned with a damp cloth.

If spare parts are required, these can be supplied by EX-TECH SAS Company.

If any failure occurs but not caused by human factor, the product can be returned to EX-TECH SAS for free repair or replacement during warranty period.

CAUTION: Not suitable to be used under circumstance which exposed or near to the source of concentrated acids, aromatic hydrocarbons, Halogens and Ketones.

13.0 CONDITIONS FOR SAFETY USE

- i. This apparatus is suitable to be used only in ambient temperature as stated below:

Type	Ambient Temp.
SB-100	-40 to +70 °C

- ii. Other than product manufacturer, painting and surface finishing are not permitted by the third party.

- iii. When used in dusty atmosphere, flameproof cable entry devices or stopping plugs have to be selected and installed carefully in order to maintain the IP rating (IP66) of the product.

Attached Table 1: Tone Selection Table

ITEM	DESCRIPTION				Max dB	SW1,SW2,SW3,SW4
Tone	Frequency	Tone Description	Tone Application	Waveform	(DB)@1M	Bit 123456
0	0	0	0	0	0	000000
01	300Hz	Continuous			105	100000
02	340Hz	Continuous			105	010000
03	440Hz	Continuous			105	110000
04	554Hz	Continuous			106	001000
05	660Hz	Continuous	All-clear, Sweden		104	101000
06	800Hz	Continuous			105	011000
07	1000Hz	Continuous	PFEER Toxic Gas		109	111000
08	1200Hz	Continuous			106	000100
09	2000Hz	Continuous			105	100100
10	2400Hz	Continuous			103	010100
11	2850Hz	Continuous			102	110100
12	420Hz@0.625 sec	intermittent	Australian, AS2220		100	001100
13	544Hz@0.875 sec	intermittent			104	101100
14	660Hz@150ms on,150ms off	intermittent	Swedish Fire Alarm		100	011100
15	660Hz@1.8sec on,1.8sec off	intermittent	Swedish Fire Alarm		103	111100
16	745Hz@500ms on,500ms off	intermittent			102	000010
17	800Hz@250ms on,250ms off	intermittent			102	100010
18	800Hz@250ms on,1sec off	intermittent			100	010010
19	1000Hz@250ms on,250ms off	intermittent			105	110010
20	1000Hz@500ms on,500ms off	intermittent	Back-up Alarm(LF)		105	001010
21	1000Hz@250ms on,1sec off	intermittent			105	101010
22	1000Hz@1sec on,1sec off	intermittent	PFEER Gen, Alarm		105	011010
23	2400Hz@250ms on,250ms off	intermittent			101	111010
24	2400Hz@500ms on,500ms off	intermittent			100	000110
25	2850Hz@1sec on,1sec off	intermittent	Back-up Alarm(HF)		101	100110
26	2850Hz@150ms on,100ms off	intermittent	Pelican Crossing		101	010110
27	970Hz@0.5sec on/0.5sec off,1.5sec off	3 Pulses	ISO 8201 Low tone		105	110110
28	2850Hz@0.5sec on/0.5sec off,1.5sec off	3 Pulses	ISO 8201 Low tone		101	001110
29	700Hz@2sec on/2sec off	intermittent	Air-raid, Sweden		105	101110
30	700Hz@125ms on/125ms off	intermittent	Local warning, Sweden		105	011110
31	720Hz@0.7sec on/0.3sec off	intermittent	Industrial alarm, Germany		105	111110
32	544Hz/440Hz@500ms	Alternating	Swedish Fire Alarm		101	000001
33	544Hz/440Hz@100ms/400ms	Alternating	AFNOR,NFS 32-001		101	100001
34	544Hz/440Hz@1sec	Alternating	Turn-out, Sweden		100	010001
35	800Hz/1000Hz@125ms	Alternating	Increased Urgency		104	110001
36	2400Hz/2900Hz@125ms	Alternating	Security Deterrent		100	001001
37	800Hz/1000Hz@250ms	Alternating	Fire Alarms		104	101001
38	800Hz/1000Hz@580ms	Alternating			104	011001
39	1000Hz/2000Hz@500ms	Alternating			104	111001
40	2400Hz/2900Hz@250ms	Alternating	Security Alarms		100	000101
41	500Hz--1000Hz@6Hz	Fast whoop			103	100101
42	500Hz--1200Hz@0.3Hz	Sweeping			102	010101
43	660Hz--1200Hz@1Hz	Sweeping			101	110101
44	800Hz--1000Hz@1Hz	Med Sweeping(LF)			101	001101
45	800Hz--1000Hz@7Hz	Fast Sweeping(LF)			102	101101
46	2400Hz--2900Hz@1Hz	Sweeping			100	011101
47	2400Hz--2900Hz@7Hz	Fast Sweeping			100	111101
48	800Hz--1000Hz@50Hz	Low Freq Buzz	Buzz		100	000011
49	2400Hz--2900Hz@50Hz	High Freq Buzz	Buzz		100	100011
50	500Hz--1200Hz@2.5sec↑ 0.5sec	Slow Whoop			102	010011
51	500Hz--1200Hz@5sec↑ , 0.25sec↓	Slow Whoop	Evacuation,Netherlands		102	110011
52	1200Hz--500Hz@1Hz	Reverse sweeping	Evacuation,Germany		102	001011
53	1400Hz--1600Hz@1sec↑ , 0.5sec↓	sweeping	NFC 48-265		100	101011
54	Simulated Bell	Fast Shake	Bell		98	011011
55	800Hz/660Hz	Tow tone chime	Int'l evacuation alarm		102	111011
56	800Hz/1000Hz	ISO 8201 Evacuation	Int'l evacuation alarm		102	000111
57	250Hz--1200Hz@3sec↑ , 6sec 3sec↓	Motor Siren-slow rise			104	100111
58	250Hz--800Hz@3sec↑ , 6sec 3sec↓	Motor Siren-slow rise			105	010111
59	250Hz--2400Hz@6sec↑ , 6sec 6sec↓	Motor Siren-slow rise			100	110111
60	Client Spare recording					001111
61	Client Spare recording					101111
62	Client Spare recording					011111
63	Client Spare recording					111111

EX-TECH SAS.


ZA Les Montagnes – 355 rue de la Génoise -16430 CHAMPNIERS (France)

Tel: +33 5 45 61 81 68


Fax: +33 5 45 23 29 46

Website: www.ex-tech.no


E-mail: info@ex-tech.no

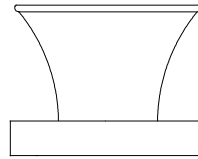

SOUNDER

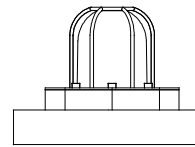

BEACON

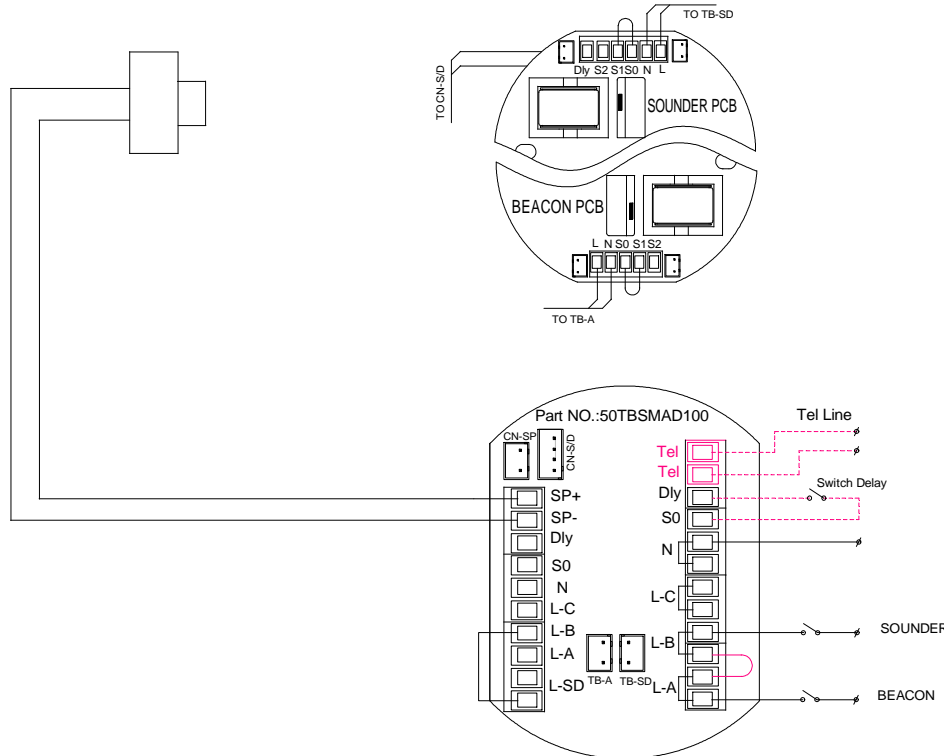

WIRING METHOD

Factory default setting

1. S0 and S1 are connected (default stage 1 alarm output)
2. Connect power supply line to terminals "L" and "N"
3. The unit will alarm (default stage 1 alarm output) when power is on
4. By default, the beacon and the sounder are setup to work simultaneously. By removing the shunt between L-A and L-B, the beacon and the sounder will work separately.

Factory default setting

1. Connect SW-S1 to S0 for stage 1 alarm output
Connect SW-S2 to S0 for stage 2 alarm output
Connect SW-S1/SW-S2 to S0 for stage 3 alarm output
2. The Stage 1 is set on DIP SW1
The Stage 2 is set on DIP SW2
The Stage 3 is set on DIP SW3
3. Connect SW-Dly to S0 for Alarm Pause delay work

PLEASE REFER TO OUR PRODUCT TECHNICAL MANUAL FOR MORE DETAILS.

Cable Selection

Please select suitable size cable according to the distance between control room & the terminals and the quantity of equipments used.

Normal size for AC power supply cable L & N is 1.5mm²

Normal size for DC power supply cable L & N is 2.5 mm²

Please select the quantity of control cables according to the actual requirement. Normal size for control cable is 1mm².

01 - 08/02/2016	Ajout d'un Shunt		
00 - 21/10/2015	Création		
Revision - date	Reason		
Material			
Treatment			
Specifications			
Drawing part		Scale: 1 : 1	Project / N° PO
WIRING DIAGRAM SB100_125_150-1		Drawn by: P. TRAUMAT	Dossier
		Date: 01/10/2015	N° Drawing
			Index
			Folio
			01 / 1/1

